

VIBRATOR TOYJOY MAGNUM OPUS THRUSTER



User manual

CONTROL

- 1) The vibration and pulsation are controlled by separate buttons and you can trigger the copulation movements separately or both functions at the same time.
- 2) Always use the "power" button to start the vibrator first with a short press.
- 3) Holding it for 2 seconds will activate/deactivate the travel lock.
- 4) With two more short press buttons, you can select the individual vibration and pulsation programs and also control the copulation movements.
- 5) Longer hold to deactivate the function.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent. You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **not water resistant or waterproof!**

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use. Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a vibrator and USB cable for charging.