

TOYJOY ANGEL (Clitoral Stimulator)

User manual



CONTROL

- 1) Hold the top power button for 2 seconds to turn on. The stimulator will greet you by lighting the LED and entering standby mode.
- 2) Subsequent short presses of the bottom button with the wave symbol will turn on and change the vibration modes and pulsations.
- 3) To turn it off, long press the power button again for 2 seconds.
- 4) For use with the remote control, turn the stimulator to standby mode.
- 5) There is no need to switch on the remote control. Short presses of the button on the remote control start and change the individual rhythms of the stimulator vibration.
- 6) To pause the vibration, hold the button for 2 seconds. The stimulator must then be switched off with its own button.

MAINTENANCE

After each use, rinse the stimulator with lukewarm water and soapy detergent. You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The stimulator is **water resistant**, so maintenance is very easy. The stimulator can be splashed with water, but you **MUST NOT immerse it in water!** Waterproof means that you could completely submerge the product in water and enjoy water play. Due only to the water resistance of the product, this is not possible in this case.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The stimulator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use. Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently. The remote is also powered by an integrated Li-on battery, which is charged with the same cable as the stimulator.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find panties, clitoral stimulator, remote control and USB cable for charging.