

VIBRATOR G-SPOT

User manual



CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) First remove the battery cover, insert 2 AAA batteries according to the marked poles and screw the cover back on.
- 3) Switch on the vibrator by briefly pressing the "power" button, which will light up.
- 4) Subsequent short presses of the button change the individual vibration rhythms.
- 5) To turn the vibrator off, press the button for approximately 3 seconds.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent. You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy. Water resistant means that splashing water will fall on it, but you **MUST NOT submerge it in water!** You could only immerse the product in water if it was **waterproof**.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by two AAA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator.