

CALEXOTICS REMOTE CONTROL BOXER BRIEF SET



User manual

CONTROL

- 1) Hold the power button on the stimulator for 4 seconds to enter standby mode. The LED will start flashing.
- 2) Short presses of the button will turn on and change the different modes of vibration and pulsation.
- 3) Turn it off by holding the button again for 4 seconds.
- 4) For use with the remote control, place the stimulator in standby mode.
- 5) Briefly press the power button on the wristband to start or pause the vibration.
- 6) Use the second button with the vibration symbol to change modes.
- 7) Switch off the stimulator with its power button.

MAINTENANCE

After each use, rinse the stimulator with lukewarm water and soapy detergent. You can also use an **erotic cleaner**, which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The stimulator is **water resistant**, so maintenance is very easy. The stimulator can be splashed with water, but you **MUST NOT immerse it in water!** Waterproof means that you could completely submerge the product in water and enjoy water play. Due only to the water resistance of the product, this is not possible in this case.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The stimulator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use. Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. The remote controller is powered by an integrated battery and is charged with the same cable as the stimulator.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find the stimulator, remote control, USB charging cable and boxers.