

VIBRÁTOR CALEXOTICS SPELLBOUND WAVE



User manual

CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) The red backlit controls can be found at the bottom where there are 3 buttons.
- 3) To turn on/off, the button must be held for approximately 2 seconds.
- 4) To change the function, just press the same button briefly.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy.

Water resistant means that splashing water will fall on it, but you **MUST NOT submerge it in water!**

You could only immerse the product in water if it was **waterproof**.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by two AAA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator.