

ANAL PLUG JOPEN PAVE AUDREY

User manual



CONTROL

- 1) Hold down the jewel-like button to start and stop the pin.
- 2) Short press to change the vibration program.
- 3) Control is also possible with the remote control, where the + and - buttons and the main trigger also in the form of a stone.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.
You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.
Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy.
The vibrator can be splashed with water, but you **MUST NOT immerse it in water!**
Waterproof means that you could completely submerge the product in water and enjoy water play.
Due only to the water resistance of the product, this is not possible in this case.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.
Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.
Charging time is about 90 minutes.
The remote is powered by an integrated battery that you charge with the same cable as the vibrator.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find an anal plug, a remote control and a USB cable for charging.