

SE-0649-05-3**SE-0649-10-3****SE-0649-15-3****SE-0649-20-3****SE-0649-25-3****SE-0649-30-3****Operating Instructions:**

1. To turn product on, press the power button once.
2. To activate vibrating functions, press the left button once. Continue pressing the button until desired function is reached.
3. To turn off vibrating functions at any time, press and hold the left button for 3 seconds. To restart, simply press the button again.
4. To activate shaft functions, press the right button once. Continue pressing the button until the desired function is reached.
5. To turn off the shaft functions at any time, press and hold the right button for 3 seconds. To restart, simply press the button again.
6. To turn product off, repeat step 1.
7. This item comes with a memory feature; item will resume on last function used.

| Item # | Complete Charging Time | Run Time on High | Run Time on Low |
|--------------|------------------------|------------------|-----------------|
| SE-0649-05-3 | 2 hours | 65 min | 80 min |
| SE-0649-10-3 | 2 hours | 65 min | 80 min |
| SE-0649-15-3 | 2 hours | 65 min | 80 min |
| SE-0649-20-3 | 2 hours | 50 min | 65 min |
| SE-0649-25-3 | 2 hours | 50 min | 65 min |
| SE-0649-30-3 | 2 hours | 50 min | 65 min |

LED light will flash while charging and glow solid when fully charged. Fully charge product before use. Battery life depends on frequency and speed of use. We recommend fully charging your product once every 6 months.

**UK
CA**