

CALEXOTIC MONTEREY VIBRATOR MAGIC GYRATION RABBIT



User manual

CONTROL

- 1) Hold down the top and middle buttons for 4 seconds to activate or deactivate the button lock.
- 2) Briefly press the middle button to turn on and change the individual vibration intensities.
- 3) Short presses of the bottom button turn on and change the individual modes of the clitoral stimulator.
- 4) Hold the corresponding button for 3 seconds to pause its activity.
- 5) Short press the top button to turn the vibrator off.

MAINTENANCE

After each use, rinse the product with lukewarm water and soapy detergent.

You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The product is **water resistant**, so maintenance is very easy.

The product can be splashed with water, but you **MUST NOT immerse it in water!**

Waterproof means that you could completely submerge the product in water and enjoy water play.

Due only to the water resistance of the product, this is not possible in this case.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The product is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a vibrator and USB cable for charging.