

# DREAM TOYS CHEEKY LOVE ANAL PLUG

## User manual



### CONTROL

- 1) Hold the power button on the pin for 3 seconds to enter standby mode. You are greeted by an LED light.
- 2) Subsequent short presses of the button turn on and change the individual rhythms of vibration and pulsation.
- 3) To turn it off, long press the power button again for 3 seconds.
- 4) For use with the remote control, place the pin in standby mode and hold for 3 seconds the power button on the remote for a long time.
- 5) Subsequent short presses of the top button with the wave symbol will turn on and change vibration modes.
- 6) Turn the controller off by holding the power button for 3 seconds.
- 7) The pin must then be switched off with its own button.

### MAINTENANCE

After each use, rinse the plug with lukewarm water and soapy detergent. You can also use an **erotic cleaner**, which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The plug is **waterproof**, so maintenance is very easy. It may get splashed with water, but you can safely immerse it in water and enjoy water play.

### LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The plug is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use. Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently. The remote control is powered by CR 2032 batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

In the package you will find an anal plug, remote control, USB cable for charging and a CR 2032 battery.