

# FETISH FANTASY PORTABLE SEX MACHINE

## User manual



### CONTROL

- 1) Plug the adapter and cable into the machine.
- 2) Screw onto the shaft of the dildo of your choice and connect the vibrator with the controller using the USB cable.
- 3) Then use the wheel to turn on the motor and control its speed.
- 4) Press the button under the wheel to start the vibration.

### MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The machine is not waterproof or water resistant!

### LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The machine is powered by a mains power cable with a universal surge protector adapter that supports most outlets worldwide.

### STORAGE

Store separately from other erotic aids in a dry and dark place.