

DILDO NAKED ADDICTION THRUSTING DONG 9

User manual



CONTROL

- 1) Unlock the buttons. To activate or deactivate the travel lock, hold both buttons on the dildo for 4 seconds. This action is supported by a short vibration.
- 2) Press the bottom power button briefly so that both buttons light up, putting the device into standby mode.
- 3) Briefly press the top button to engage the first movement mode and further presses to move up a level.
- 4) Use the bottom button to go back one speed.
- 5) Turn it off by long pressing the power button again for 3 seconds.
- 6) For use with the remote, put the dildo in standby mode and briefly press the larger top button to engage the movements and move up a speed.
- 7) Use the bottom button to go back one speed.
- 8) To turn the movements off, hold the power button on the controller for 3 seconds.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy.

The vibrator can be splashed with water, but you **MUST NOT immerse it in water!**

Waterproof means that you could completely submerge the product in water and enjoy water play.

Due only to the water resistance of the product, this is not possible in this case.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank.

The remote control is powered by CR 2032 batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator, remote control, USB cable for charging and velvet pouch for storing accessories.