

VIBRATOR BLUSH JET MIDNIGHT CARBON

User manual



CONTROL

- 1) Anyone can use the two buttons on the end of the cartridge.
- 2) Hold the + button for 3 seconds to turn on.
- 3) The LED indicator will light up and the vibration will begin.
- 4) Short press the + button to change programs and you can return to the previous mode by short pressing - button.
- 5) Hold the - button for 3 seconds to turn it off again.

MAINTENANCE

After each use, rinse the dildo with lukewarm water and soapy detergent.

You can also use [an erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The dildo is waterproof, so maintenance is very easy.

Waterproof means that splashing water will fall on it, but you can safely submerge it in water and enjoy water play.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The dildo is powered by a Li-on battery, which is about one half of the factory charged, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or power bank. When charging, the LED flashes and when fully charged, the LED indicator lights permanently.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a dildo and a magnetic USB cable for charging.