

ROBOTIC MOUTH MASTURBATOR



User manual

CONTROL

- 1) At the bottom of the controller you will find the battery cover.
- 2) Remove the battery cover, insert 4 Type C batteries (monocells-not included) and replace the cover.
- 3) To turn on the masturbator, turn the dial on the side of the controller from the OFF position.
- 4) The dial also serves as the vibration controller.
- 5) Turn it off by turning the dial on the side of the controller to the OFF position.

MAINTENANCE

After each use, remove the masturbator sleeve and rinse with lukewarm water and soapy detergent. You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The masturbator **is not waterproof or water resistant!**

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The masturbator is powered by four C batteries.
For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a masturbator with remote control.