

# VIBRATOR SEVEN CREATIONS LONG JOHN FUCKING



## User manual

### CONTROL

- 1) Short press the bottom button with the vibration symbol to start it and at the same time its light will turn on LED indicator at the bottom.
- 2) Subsequent short presses change the vibration and pulsation modes.
- 3) To switch it off, long press the button again for 2 seconds.
- 4) You can switch on and off the vibration by short pressing the button with the arrow symbol.
- 5) The top buttons with the up and down arrows control the speed of the scroll, which is also indicated by the top LED indicator.
- 6) The two functions can be set independently of each other.

### MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.  
You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.  
Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy.  
Water resistant means that splashing water will fall on it, but you **MUST NOT submerge it in water!**  
You could only immerse the product in water if it was **waterproof**.

### LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The vibrator is powered by three AA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

Vibrator.