

# DILATOR YOU2TOYS FOR WOMANS

## User manual



### CONTROL

- 1) The lower part of the dilator serves as a cover for the battery.
- 2) To turn on the dilator, remove the battery cover, insert 3 LR44 batteries and the cover screw them back on.
- 3) You change the individual vibration rhythms by briefly pressing the button on the battery cover.

### MAINTENANCE

After each use, rinse the dilator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The dilator **is not waterproof or water resistant!**

### LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The vibrator is powered by three LR44 batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

Dilator and 3 LR44 batteries.