

# **GVIBE MINI TIFFANY VIBRATOR**

# **User manual**



### CONTROL

- 1) Turn on the vibrator by pressing the "+" button for about 2 seconds. The vibrator will announce that it has been switched on by illuminating the LED and vibration.
- 2) The "+" and "-" buttons are used to increase or decrease the vibration intensity.
- 3) The individual vibration and pulsation rhythms are switched by the middle button with the wave symbol.
- 4) To switch off the vibrator, press the "-" button for approx. 2 seconds.

### **MAINTENANCE**

After each use, rinse the product with lukewarm water and soapy detergent.

You can also use an erotic cleaner, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

# WATERPROOF

The product is water resistant, so maintenance is very easy.

The product can be splashed with water, but you MUST NOT immerse it in water!

Waterproof means that you could completely submerge the product in water and enjoy water play.

Due only to the water resistance of the product, this is not possible in this case.

# **LUBRICATION**

Use only water-based lubricants. Other lubricating gels could damage the surface of the aid and it could become sticky.

### **DRIVE AND CHARGING**

The product is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

# **STORAGE**

Store separately from other erotic aids in a dry and dark place.

### **PACKAGING CONTENTS**

In the package you will find the vibrator, a USB cable for charging and a bag for storing the vibrator.

