

DIRTY DOZEN SET



User manual

VIBRATOR CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) Remove the battery cover, insert the AA battery and screw the cover back on.
- 3) The bottom cover has a built-in rotary wheel to turn the vibrator on and continuously control the vibration.

VIBRATING EGG CONTROL

- 1) The vibrating egg is powered by batteries from the remote control.
- 2) Remove the battery cover and insert two AA batteries according to the marked poles.
- 3) Turn on the egg by turning the wheel on the side, which also serves as a stepless regulator vibration.

MAINTENANCE

After each use, rinse the erotic aids with lukewarm water and soapy detergent. You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator and vibrating egg **are not waterproof or water resistant!**

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by an AA battery and the vibrating egg (remote control) is powered by two AA batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator, vibrating egg, vibrator sleeves, Venus balls, erection loop, penis sleeve and penis ring.