



VIBRATOR CARE INSTRUCTIONS

1. Take care when using the vibrator for the first time. Vibration can be intense.
2. Clean your vibrator after every use.
3. Take care when cleaning your vibrator. Remember it is an electrical item.
4. Keep your vibrator clean and dry. Store in a non-damp environment.
5. Always store your vibrator separately. Different materials have different chemical configurations and may react with each other.
6. Always allow your vibrator to cool down before storing in a safe place. Vibrators are electrical and motors grow warm with use.
7. Excessive usage of the vibrator will wear out the motor and may cause the motor to overheat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing use.
8. Take care when using oils and lubricants so that they do not enter the battery compartment as they can react with the batteries.



CHARGING INSTRUCTIONS

This vibrator arrives with low partial charge of between 30-50%, so it is recommended to fully charge before use. Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input. Initial charge will take about an hour and subsequent charges will take about 2 hours to complete. The indicator light will be on while device is charging, and turn off when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 90 minutes of play time on the lowest level of vibration, and about 45 minutes on the highest level.

This toy operates at a sound level of 55 db with an 750mAh battery, at a voltage of 3.7V.

INSTRUCTIONS FOR USE

This thrusting, vibrating toy is operated by an easy-to-use 3-button panel. Each button controls a separate motor with a separate function and has its own on/off switch.

The left button controls the Thrusting Function Motor. Press for at least 2 (two) seconds to turn on the thrusting motor. Click the button again more quickly to cycle through a total of 3 (three) thrusting frequencies. The white indicator light will stay solid when the motor is engaged, and flash once when clicking to the next speed or function. Press again for at least 2 (two) seconds to turn off the thrusting motor.

The middle button controls the Wand Head Vibration Motor. Press for at least 2 (two) seconds to turn on the vibrations of the motor in the wand head of the toy. Click the button again more quickly to cycle through a total of 8 (eight) vibration frequencies. The white indicator light will stay solid when the motor is engaged, and flash once when clicking to the next speed or function. Press again for at least 2 (two) seconds to turn off the Wand Head Vibration Motor.

The right button controls the Body Vibration Motor. Press for at least 2 (two) seconds to turn on the vibrations of the motor in the body of the toy. Click the button again more quickly to cycle through a total of 8 (eight) vibration frequencies. The white indicator light will stay solid when the motor is engaged, and flash once when clicking to the next speed or function. Press again for at least 2 (two) seconds to turn off the thrusting motor.

ATTACH USB
CHARGER
TO PRONGS

USB RECHARGEABLE