

## **Product Specifications:**

Material: ABS+Silicone Battery: 370mAh Voltage: 3.7V Number of Vibrations: 5 suction & 8 vibrating

User time: 60 minutes Sound Level: 55dbA

## CHARGING INSTRUCTIONS

CHARGING INSTRUCTIONS
This vibrator arrives with a minimal partial charge, so it is recommended to fully charge before use.
Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input, which is located above the two buttons on the control panel. Initial charge will take about 1 hour, and subsequent charges will take about 2 hours to complete.
The indicator light will flash while device is charging and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 2 hours of play time on the lowest level of vibration, and about 1 hour on the highest level. This toy operates at a sound level of less than 55dbA with a rechargeable 370mAh lithium battery at 3.7V.

## INSTRUCTIONS FOR USE

INSERT

CHARGER

INSTRUCTIONS FUR USE
This toy has a convenient 2-button control behind the larger "sucker" end. The control panel consists of two function motor buttons and the DC charger input.
Each function button controls its own function, including turning that function on and off. Motors are operated congretable.

separately. To turn on the suction function located in the larger end of to turn on the suction function located in the larger end of the toy, press the Suction Button (top button) for at least 2 seconds. The light will turn on and toy will begin sucking at its first lowest intensity. Press this button again more quickly to cycle through a total of 5 frequencies. To turn off the suction function motor, press the Suction Button for at least 2 seconds.

for at least 2 seconds.

To turn on the vibration function located in the smaller end of the toy, press the Vibration Button (bottom button) for at least 2 seconds. The light will turn on and toy will begin vibrating at its first lowest intensity. Press this button again more quickly to cycle through a total of 8 frequencies. To turn off the vibration function with the second control of the vibration of the state of the vibration of the vibration. function motor, press the Vibration Button for at least 2 seconds.

USB RECHARGEABLE