

PRINTS CHARMING BUZZED 5" MINI VIBRATOR



User manual

CONTROL

- 1) Unscrew the cap and insert the batteries according to the marked poles.
- 2) Screw the cap back on firmly one way.
- 3) Hold the button for 3 seconds to turn it on.
- 4) Briefly press the button to change the different vibration and pulsation modes.
- 5) Turn it off by holding the button down again for 3 seconds.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an erotic cleaner, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is water resistant, so maintenance is very easy.

Water resistant means that splashing water will fall on it, but you **MUST NOT submerge it in water!** You could only immerse the product in water if it was **waterproof**.

LUBRICATION

Due to the material of the vibrator, you can use lubricants of any base.

DRIVE AND CHARGING

The vibrator is powered by two AAA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Trinet Corp., s.r.o.

Vibrator and velvet bag.