

GIFT SET FOR WOMEN BIJOUX INDISCRETS HOROSCOPE



User manual

VIBRATOR CONTROL

- 1) Before first use, you need to unscrew the top and remove the protective wheel from the battery, which prevents the vibrator from starting up by itself.
- 2) Switch on the tool by briefly pressing on its tip.
- 3) Subsequent short squeezes are used to gradually switch the vibration programs
- 4) To turn the vibrator off, hold it for a longer time.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy.

Water resistant means that splashing water will fall on it, but you **MUST NOT submerge it in water!**

You could only immerse the product in water if it was **waterproof**.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by three LR41 batteries, which are included in the packa

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Necklace with birthstone, mini vibrator and 3 LR41 batteries.