

# STIMULÁTOR BIJOUX INDISCRETS SEX AU NATUREL

## User manual



### CONTROL

- 1) Hold the button on the body for 3 seconds to turn on. The first vibration mode will start and the LED under the button will light up.
- 2) Short presses of the button change the individual vibration and pulsation rhythms.
- 3) Turn it off by long pressing the button again for 3 seconds.

### MAINTENANCE

After each use, rinse the stimulator with lukewarm water and soapy detergent. You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The stimulator is **waterproof**, so maintenance is very easy. It can get splashed with water, but you can safely submerge it in water and enjoy water play.

### LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The stimulator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use. Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

Stimulator and magnetic USB cable for charging.