

# BLUSH GAIA ECO BULLET VIBRATOR



## User manual

### CONTROL

- 1) The bottom of the vibrator serves as a cover for the battery.
- 2) To turn on the vibrator, remove the battery cover, insert the AAA battery (not included) and screw the cover back on.
- 3) To turn the vibrator on and off, press the button on the battery cover.

### MAINTENANCE

After each use, rinse the product with lukewarm water.

We also recommend using an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The product is fully **waterproof**, so maintenance is very easy.

It may get splashed with water, but you can safely immerse it in water and enjoy water play.

### LUBRICATION

Due to the material of the product, you can use [lubricants of any base](#).

### DRIVE AND CHARGING

The product is powered by one AAA battery.

For greater endurance, we recommend using alkaline or rechargeable batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

Vibrator.