

# BLUSH ENLUST AYUMI VIBRATING STROKER



## User manual

### CONTROL

- 1) Press the “Blush” button on the side of the cartridge to turn it on.
- 2) Press the “Blush” button on the side of the cartridge to turn it off.
- 3) Scan the QR code on the masturbator box to view the AI model.

### MAINTENANCE

Rinse the stroker with lukewarm water and soapy detergent after each use.

CAUTION! Remove the battery cartridge before washing the stroker!

We also recommend using [an erotic aid cleaner](#), which also helps to remove microscopic dirt.

Just spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The vibrating cartridge **is not waterproof or water resistant.**

### LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and the lubricant will become sticky.

### DRIVE AND CHARGING

The vibrating cartridge is powered by a AAA battery.

For longer battery life, we recommend using alkaline or rechargeable batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

The package includes a stroker and a vibrating cartridge.