

# MASTURBATOR PDX ELITE VIBRATING ANAL STROKER



## User manual

### OPERATION

- 1) There is a vibrating cartridge on the bottom of the masturbator, pull it out, unscrew the battery cover and remove the slide that is located between the cover and the battery.
- 2) Press the on/off button on the side of the cartridge.
- 3) Vibration will activate after each impact.

### MAINTENANCE

After each use, remove the insert from the plastic packaging and rinse with lukewarm water.

You can also use [an erotic aid cleaner](#), which also helps to remove microscopic dirt.

Just spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The vibrating cartridge **is not waterproof or water resistant!**

### LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and the lubricant will become sticky.

### DRIVE AND CHARGING

The vibrating cartridge is powered by three LR44 batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

In the package you will find a masturbator with a vibrating cartridge, in which 3 LR44 batteries are placed.