

VIBRATOR ANNE'S DESIRE PANTY PLEASURE WIRELESS TECHNOLOGY WATCHME

User manual



CONTROL

- 1) Hold the power button on the stimulator for 2 seconds. It will greet you by lighting the LED and entering standby mode.
- 2) Subsequent short presses of the button turn on and change the vibration and pulsation modes.
- 3) To turn it off, long press the power button again for 2 seconds.
- 4) For use with the remote control, place the stimulator in standby mode.
- 5) Subsequently press the middle button on the watch with the wheel symbol for 3 seconds to start the vibration.
- 6) Short presses change the individual modes.
- 7) Short presses of the arrow buttons adjust the intensity of the vibration.
- 8) Hold down the wheel button for 2 seconds to pause the vibration.
- 9) To turn off the stimulator, you must again press the button on the body of the stimulator.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent. You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy. The vibrator can be splashed with water, but you **MUST NOT immerse it in water!** Waterproof means that you could completely submerge the product in water and enjoy water play. Due only to the water resistance of the product, this is not possible in this case.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use. Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. The watch (remote) is charged with the same cable as the vibrator.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a vibrator, a watch (remote control) and a magnetic USB cable for charging.