

NAOMI WAND SMART EDITION MASSAGE VIBRATING

User manual



CONTROL

- 1) Press the power button once to put it into operation.
- 2) Press the same button to turn it off.
- 3) In the on mode, the LED indicator will light up and you can then switch between the stages at will with the second button.

MAINTENANCE

After each use, rinse the product with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The product is **not water resistant or waterproof!**

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The product is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a vibrating head and a USB cable for charging.