

BIJOUX INDISCRETS SET INSTRUMENTS OF PLEASURE (VIBRATING CARTRIDGE)



User manual

CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) To switch on the vibrator, remove the battery cover, insert 3 LR44 batteries (included) and screw the cover back on.
- 3) Turn the vibrator on and off with the button on the underside of the cover.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **not waterproof or water resistant!**

LUBRICATION

Due to the material of the vibrator, you can use **lubricants of any base**.

DRIVE AND CHARGING

The vibrator is powered by three LR44 batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator.