

ZALO BESS VIBRATOR

User manual



CONTROL

- 1) To activate or deactivate the button lock, hold both buttons on the handle for 3 seconds. The action will be supported by an LED.
- 2) Briefly press one of the buttons to activate. The vibrator will greet you with a flashing LED and will put itself into standby mode.
- 3) Now you can control the individual motors with further short presses.
- 4) The top button starts and changes the individual vibration rhythms of the tip, the bottom button starts the motor in the handle.
- 5) You can alternate between the individual motors.
- 6) To turn it off, long hold one of the buttons for 3 seconds.

MAINTENANCE

After each use, rinse the product with lukewarm water and soapy detergent. You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The product is **water resistant**, so maintenance is very easy. The product can be splashed with water, but you **MUST NOT immerse it in water!** Waterproof means that you could completely submerge the product in water and enjoy water play. Due only to the water resistance of the product, this is not possible in this case.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The product is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use. Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a vibrator and magnetic USB cable for charging.