Panty vibrator with remote control

Contents

- Panty Vibrator
- Remote control
- Directions for use
- USB charging cable

Product specifications


- Format: 45 x 100 mm
- Material: 100% body-safe silicone
- Whisper quiet
- Waterproof (IPX7)
- 8 hours standby
- Up to 1,5 hours operating on full battery
- 6 Vibration and intensity patterns
- Remote control: range of 15 meters
- Odourless

Instructions

Turn on the Panty Vibrator by pressing the button on the Panty Vibrator for 2 seconds until you feel the toy vibrate 1x. The Panty Vibrator is now on standby and can be further controlled via the remote control.

Place the Panty Vibrator with the concave side up in your panties. The small dots will touch the clitoris. Put on your panties, and you'll be able to wear the Panty Vibrator comfortably for hours. With the remote control you can control the 6 vibration patterns.

An exciting evening guaranteed!

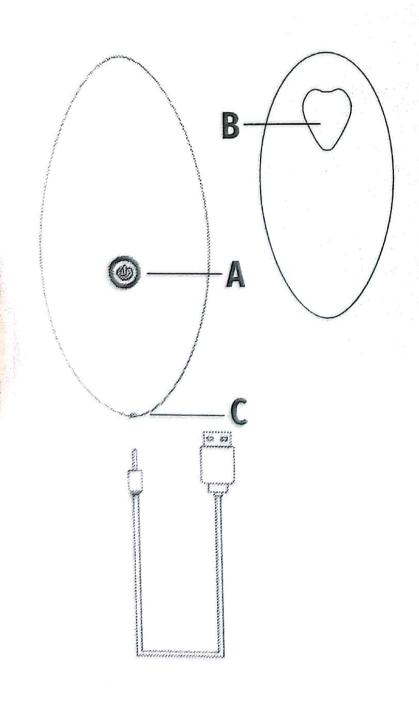

A. Button On/Off:

Press ON/OFF button for 2 seconds to turn on.

Press and hold ON/OFF button for 2 seconds to turn off.

B. Button Vibration Modes:

Press to get to the pulse that you are looking for... there are up to 6 vibration patterns to choose from.

C. Charging:

Push the plug of the charger firmly inside the charging-opening of the 'Panty Vibrator' and put the charger in a (wall) socket to charge.

Lubricant

We recommend using a water-based lube. NEVER use massage oil or hand cream as a lubricant. Exclusively use a reputable lubricant.

Cleaning

Clean the product with warm water and some (antibacterial) soap or a toy cleaner before and after use. Leave it to dry afterwards or dry it off with a clean towel. Do not use any other substances than those described above, because they could damage the product. Do not use a cleaning substance than contains alcohol, petroleum or acetone.

Storage

Do not expose the product to direct sunlight nor to extreme heat. Store the device in a dust-free environment and keep it away from other devices. Store the product in a dry and well-ventilated space.

Safety

This product should not be used by people who are allergic to silicones.

If using the products causes pain or discomfort, immediately terminate their use. Always read the manual before use.

Removal information

This product must not be treated as household waste. Dispose of this product at a collection point for electric and electronic devices.

Disclaimer

This product is exclusively intended for adults. The use of Feelztoys products is entirely at one's own risk. Neither the manufacturer nor the distributor and supplier are responsible or liable for damage caused by the products' use.

www.feelztoys.com