

VIBRATOR LA GEMMES QUARTZ LAY-ON

User manual



CONTROL

- 1) Unscrew the cap and insert the battery with the plus pole facing out.
- 2) Once screwed in, just gently turn the tip to start or stop the vibration.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an erotic cleaner, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy.

Water resistant means that splashing water will fall on it, but you **MUST NOT submerge it in water!**

You could only immerse the product in water if it was **waterproof**.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by one AA battery. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator.