

# FLAGRANTI LUXURY WAND 2IN1 MASSAGE HEAD



## User manual

### CONTROL

- 1) Hold down the top button with the big wave symbol for 3 seconds to switch on the head motor.
- 2) Short presses of this button change its individual vibration and pulsation rhythms.
- 3) Hold down the bottom button with the smaller wave symbol for 3 seconds to switch on the vibrator motor.
- 4) Short presses of this button change its individual vibration and pulsation rhythms.
- 5) The motors are then switched off by holding down the corresponding button again for 3 seconds.

### MAINTENANCE

After each use, rinse the product with lukewarm water and soapy detergent.  
You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.  
Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The product is **water resistant**, so maintenance is very easy.  
The product can be splashed with water, but you **MUST NOT immerse it in water!**  
Waterproof means that you could completely submerge the product in water and enjoy water play.  
Due only to the water resistance of the product, this is not possible in this case.

### LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The product is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.  
Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.  
Charging time is about 90 minutes.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

In the package you will find a massage head and a magnetic USB cable for charging.