

# VIBRATOR MELO L1298

## User manual



### CONTROL

- 1) Hold down the bottom button with the M symbol for 3 seconds to switch on. The vibrator will greet you by lighting up the LEDs.
- 2) Subsequent short presses of this button will turn on and change the pressure wave modes.
- 3) Short press the top button with the wave symbol to turn on and change the individual rhythms of vibration and pulsation.
- 4) To pause the vibration, hold this button for 3 seconds.
- 5) To turn the vibrator off, long press the M button again for 3 seconds.

### MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent. You can also use an **erotic cleaner**, which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The vibrator is **waterproof**, so maintenance is very easy. It may get splashed with water, but you can safely immerse it in water and enjoy water play.

### LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The vibrator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use. Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

Vibrator and magnetic USB cable for charging.