

THE GIFT SET JE JOUE THE NAUGHTY COLLECTION

User manual



CONTROL

- 1) Hold the + button for 2 seconds to turn on the stimulator.
- 2) Short presses of this button increase the intensity of the vibration, short presses of the - button decrease it back.
- 3) Short presses of the middle button with the wave symbol change the individual vibration and pulsation rhythms.
- 4) Hold the button - for 2 seconds to switch off the stimulator.

MAINTENANCE

After each use, rinse the stimulator with lukewarm water and soapy detergent. You can also use an **erotic cleaner**, which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The stimulator is **waterproof**, so maintenance is very easy. It may get splashed with water, but you can safely immerse it in water and enjoy water play.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The stimulator is powered by an integrated Li-ion battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find the stimulator, task cards, satin blindfold, massage candle and USB cable for charging.