

LELO

GIGI™ 2

USER MANUAL



May the powerful,
near-silent vibrations
open new ways
you reach climax.

Enjoy it often, wisely and with care.

Congratulations on acquiring GIGI™ 2. Before getting more closely acquainted with it, please take a moment to look through this user manual.

IMPORTANT: Your pleasure object has been locked for transportation. To unlock, simply connect the charger or see below.

SAFETY

This product should only be used by people aged 18 years and over. Persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge of the device should only use the product if they have been given supervision or instruction concerning the use of the product in a safe way and understand the hazards involved. Minors shall not play with the product. Minors should not clean and/or use the product unsupervised.

COMPLIANCE STATEMENT

a. Please take note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

 
b. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

GETTING STARTED

- Before first use, charge your GIGI™ 2 for 2 hours.
- Make sure GIGI™ 2 is unlocked by pressing and holding the + and - buttons simultaneously for 3 seconds until the light turns on.
- Apply LELO Personal Moisturizer on the product and your body for enhanced pleasure.
- Press + button to turn on; press again to increase vibration strength.
- Press the Δ button to move up through 8 stimulation modes, and press the ▽ button to go back through the modes.
- Press - button to reduce vibration strength.
- Press and hold the - button to turn off.

GETTING TO KNOW YOUR GIGI™ 2

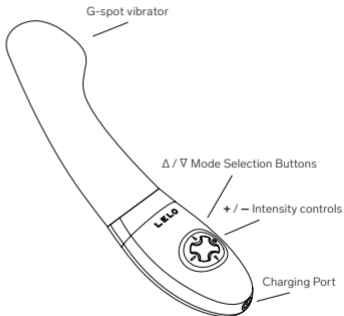


USING GIGI™ 2

- How to hold



 - Where to place on the body




Tip: For the most pleasurable sensation, apply a liberal amount of LELO Personal Moisturizer to your body and to GIGI™ 2 before and during use.



CHARGING YOUR GIGI™ 2

 - Insert the DC plug into the DC port at the base of your GIGI™ 2.
- Insert the mains plug into a USB Port. The LED on the interface of your GIGI™ 2 will pulse to indicate it is charging. When it is fully charged, the LED will emit a steady glow. When the battery is running low, the LED on your GIGI™ 2 will emit a blinking white light.

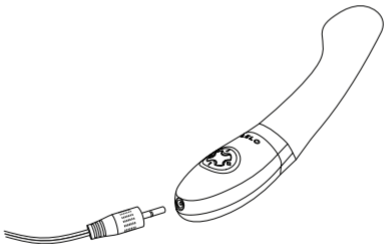

Only use original chargers provided by LELO with your GIGI™ 2.

CLEANING, STORAGE, AND SAFETY

Using GIGI™ 2 with hand creams or silicone-based lubricants may make the silicone permanently tacky.

GIGI™ 2 is fully waterproof, making cleaning simple. Rinse and spray with LELO Toy Cleaner, then rinse again and allow it to dry.

Always clean your GIGI™ 2 thoroughly before and after each use. You can wash the silicone with warm water and antibacterial soap, rinse with clean hot water and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol or acetone.

Avoid leaving your GIGI™ 2 in direct sunlight and NEVER expose it to extreme heat. Store your GIGI™ 2 in a dust-free place and keep it away from products of other materials.

The product must only be supplied at SELV.

TROUBLESHOOTING

The LED on your GIGI™ 2 does not pulse when the charger is connected:

- The battery is drained and will require several minutes to acknowledge that it is being charged.
- The charger is not properly connected. Check wall and DC sockets.

Your GIGI™ 2 does not activate when the center button is pressed:

- The battery is empty. Recharge your GIGI™ 2.
- The interface of your GIGI™ 2 is locked. Hold down + and – for 5 seconds.

If you experience any other problems with your GIGI™ 2 or if you have any questions regarding the operation, please contact: **customer@lelo.com**

SPECIFICATIONS

MATERIALS	ABS Plastic / Body-Safe Silicone
FINISH	Glossy / Matte
SIZE	165 x 35 x 33 mm / 6.5 x 1.4 x 1.3 in.
DIAMETER	37.8 mm / 1.5 in.
INSERTABLE LENGTH	95 mm / 3.7 in.
WEIGHT	79g / 2.8 oz.
BATTERY	Li-Ion 500 mAh 3.7V
CHARGING	2 hrs at 5.0 V 500 mA
USER TIME	Up to 4 h
STANDBY TIME	Up to 90 days
FREQUENCY	100Hz
MAX. NOISE LEVEL	50 dB
COLORS	Turquoise Blue, Pink, Deep Rose, Cool Gray

REGISTER WARRANTY

To activate your 1-Year Limited Warranty, register the number provided on the LELO Authenticity Card at LELO.COM/SUPPORT.

1-YEAR WARRANTY

LELO warrants this pleasure object for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials. The warranty covers working parts that affect the function of the pleasure object. It does NOT cover cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty. If you discover a defect and notify LELO during the warranty period, LELO will, at its discretion, replace the pleasure object free of charge. Claims under warranty must be supported by reasonable evidence of the date of claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period.

To claim your warranty, you must log in to your account at LELO.COM then select the option to make a warranty claim. Shipping costs are non-refundable. This undertaking is in addition to the consumer's statutory rights and does not affect those rights in any way.

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):

The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for the recycling of electrical and electronic equipment.



DISCLAIMER: Users of this product do so at their own risk. Neither LELO nor its partners assume any responsibility or liability for the use of this product. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. The model may be changed for improvements without notice.

© 2022 LELo AB. All rights reserved.

LELo AB, Karlavägen 41, 114 31 Stockholm, Sweden.

Distributed in the US by: LELo Inc., 5799 Fontanoso Way, San Jose, CA 95138, USA.

Distributed in Australia by LELo Oceania 6 Prohasky Street, Port Melbourne, VIC 3207, Australia.

Designed and developed by LELo Sweden.

Made in China.

US and International patents or patent applications apply to this product:

visit www.lelo.com/ip

www.lelo.com