

User manual

Intended use

Nexus G-Stroker is a truly unique and versatile toy that can be used anally or vaginally. At the base of the shaft there are tiny stroker beads that dance up and down for your pleasure whilst the buzzy vibrations in the base tantalise you at the same time. Whatever your pleasure, Nexus G-Stroker has it covered.

Before use

Nexus G-Stroker is fully rechargeable via a USB lead which plugs directly into your computer or laptop. Located underneath the toy there are two magnetic contacts where you attach the magnetic charge pad. Before charging, make sure that the magnetic contacts are clean. To show that the toy is charging successfully, the lights on the On/Off buttons will illuminate red. When fully charged the lights will change to green. When your Nexus G-Stroker is running low it will flicker green to indicate that you should charge soon. Standard charging time is 2.5 hours which will give you 3.5 hours of play. Nexus G-Stroker remote control is waterproof and rechargeable. To charge the remote, simply connect the USB charger to a power source and apply to the magnetic charge points on the remote. GB 4 GB Standard charging time is 1 hour which will give you 100 hours of control.

To enjoy anal play it is important to prepare beforehand. We recommend you empty your bowels and clean the area externally. However, if you would like to enjoy a more thorough cleanse before using your Nexus G-Stroker you can achieve this easily with the use of a Nexus Anal Douche. Fill the bulb with clean, warm water and gently insert the nozzle into your anus. Squeeze the bulb so that the water enters your anus and then allow the water to flow back out. Repeat this several times until the water runs clear. If you feel any cramps or discomfort, remove it immediately and allow the water to pass back out. Once you feel clean and prepared add a liberal amount of good quality, water-based lubricant before use.

How to use

We recommend that you explore all the settings of your Nexus G-Stroker before using it for the first time, so that your experience is optimised from the start. Your toy has 6 stimulation modes and 3 speed stroker stimulation beads, which will give you a total of 27 combinations of pleasure to discover. Turn ON/OFF by pushing the vibration button on the underside of the Nexus G-Stroker for 1.5 seconds. Once the toy is switched on you can either scroll through the functions on the toy or you can use the remote control included. To change the Nexus G-Stroker beads speed press the button. To change the perineum stimulator simply press the vibration button. To turn off the toy, simply press the ON/OFF button again for 1.5 seconds. To use the remote control you will first need to turn Nexus G-Stroker ON by pushing the vibration button on the underside of the toy. Once ON you can control the toy with the remote control up to 8 metres away. To change the Nexus G-Stroker beads speed simply press the rotation button on the remote control. To change the perineum/clitoral stimulator vibration simply press vibration button on the remote control.

Lubricant

Never use a silicone based lubricant as this will react with the silicone of your Nexus G-Stroker and alter the feel of the toy. We recommend that you use a thick, high quality water based lubricant such as Nexus Slide.

Cleaning

To prolong the life of your Nexus G-Stroker, clean thoroughly before and after use. Nexus G-Stroker is waterproof so you can wash with warm soapy water or simply spray with Nexus anti-bacterial wash, wipe with a damp cloth and leave to dry. Never use cleaners which contain alcohol or acetone.

Storage

Carefully storing your toy in a cool, dark place will prevent potential damage from dust and sunlight. We provide a discreet storage pouch which will keep your toy dust free and protected. Never leave Nexus G-Stroker in direct sunlight and always store separately from other toys.

Safety instructions

Use the toy with lubricant and insert it slowly and carefully anally to prevent anal fissures. Do not insert the toy fully into the anus. Forceful or improper insertion can cause injuries in the anal area. Do not use the toy in the following situations: if the skin is swollen, irritated, or inflamed, after surgeries in the pelvic area, if any components are damaged and/or if you are allergic to any of the materials or if you are aware of an allergy to

any of the materials. In case of cardiovascular diseases or pregnancy, consult a doctor before using the toy. If pain and/or discomfort occur during use, discontinue use immediately and refrain from further use. Do not use the toy in the neck area. Do not use it together with other vibrating toys. Do not share the toy with others to avoid diseases and infections. Do not charge or use if the toy or charging cable is damaged. Do not use while charging as it can cause an electric shock. Avoid contact between the charging cable and water to prevent electric shock. Do not use a USB hub that charges other devices. Use the charging cable only with adapters that have short circuit protection to avoid fire hazard. Moisture can damage the motor. Turn off the toy immediately if moisture enters the interior and open it. The toy should only be used when the interior is completely dry. Turn off the toy immediately if it overheats and let it cool down before using it again. Do not clean with products containing alcohol, silicone, gasoline, acetone, or other corrosive substances. Not suitable for washing machines or dishwashers. Keep the toy out of reach of babies, children, pets, and animals. The toy is only intended for proper use according to its described function.

Declaration of conformity

We hereby declare that the radio equipment type "G-Stroker" is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://nexusrange.com/pages/manuals>



Disposal information

Do not dispose of the product in household waste. Dispose of the product in an environmentally friendly manner at a collection point for the recycling of electronic products. The symbol with the crossed-out bin indicates the separate collection of waste electrical and electronic equipment. As a distributor of electronic products, we are legally obliged to accept and facilitate the return of used electrical and electronic equipment including batteries free of charge. To do so, please contact customer service. Note local disposal options. Avoid generating unnecessary waste.

Need help?

If you have any questions regarding this product, do not hesitate to contact customer service:

- ☎ +31 (0) 598-690 453
- ✉ info@nexusrange.com
- 🌐 www.nexusrange.com