

User manual

Before use

Charge the vibrator completely before first use with the included USB cable. Plug the pin at the end of the charging cable into the charging point at the bottom of the vibrator. Connect the cable to a USB port. When the battery is charging, the LED light blinks. When the light stops blinking and burns constantly, the battery is completely charged. Open the battery compartment of the remote control and remove the protective plastic placed under the battery. Close the battery compartment. Place the vibrator in the thong.

Turning on and off

Hold the power button on the vibrator for 3 seconds to turn on the toy. The LED light will turn on. If this is not the case, the battery is empty. Charge the battery first and then try again. Hold the power button on the remote control for 3 seconds. The LED light will turn on and the vibrator will start vibrating. If this is not the case, the battery in the remote control is empty or not placed correctly. Replace the battery or make sure it is placed correctly. Also make sure the protective plastic placed under the battery is removed. After use, hold the power button on the remote control for 3 seconds to turn off the vibrations. To turn off the vibrator, hold the power button on the vibrator for 3 seconds.

Operating

Press the + button on the remote control to go to the next setting. Press the - button on the remote control to go back to the previous setting. There are 4 vibration speeds and 6 vibration patterns in total. The vibrator can also be operated without using the remote control. Turn on the vibrator and press the power button to turn on the vibrations. Press the power button again to go to the next setting.

Lubricant

The vibrator is made of silicone. Therefore the vibrator can only be used in combination with water-based lubricant. Other lubricants can negatively affect the material, allowing bacteria to grow and making it impossible to hygienically clean the toy.

Cleaning

Rinse the vibrator with lukewarm water. Apply toy cleaner to the vibrator and rinse it with lukewarm water again. Repeat this step if necessary. Lay the vibrator down to dry or dab it dry with a lint-free cloth or towel.

Storage

Safely store the vibrator at a dry and dark place. Use a toy bag to protect the toy from dust and scratches.

Disclaimer

This product is sold as a novelty product only. All rights reserved. To avoid injury or aggravation of pre-existing conditions this product should not be used on bruised, swollen or inflamed areas. Only use the product as instructed. No medical claims are warranted or implied by the use of this product, its use is at your own risk.