

# PRETTY LOVE OZZY PUSSY MASTURBATOR



## User manual

### CONTROL

- 1) On the back of the masturbator you will find the battery cover.
- 2) Remove the battery cover, insert three AAA batteries (not included).
- 3) Turn on the masturbator by pressing the top “power” button.
- 4) Short presses of the button with the “arrow” symbol switch between the individual thrusting rhythms.
- 5) Turn off the masturbator by pressing the top “power” button.

### MAINTENANCE

After each use, always remove the insert from the masturbator and rinse with lukewarm water. We also recommend using an [erotic cleaner](#), which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The product is **not waterproof or water resistant! Only the sleeve of the masturbator is waterproof.**

### LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The product is powered by three AAA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

In the package includes a masturbator.