

PRETTY LOVE BIHOP VIBRATOR



User manual

CONTROL

- 1) The bottom of the vibrator serves as a battery cover.
- 2) Remove the battery cover, insert 2 AAA batteries (not included) and screw the cover back on.
- 3) Turn on the vibrator by pressing the bottom "power" button for about 3 seconds.
- 4) To turn on and change the vibration rhythms, briefly press the top button with the "wave" symbol.
- 5) Turn off the vibrator by pressing the bottom "power" button for about 3 seconds.

MAINTENANCE

After each use, rinse the product with lukewarm water.

We also recommend using an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The product is **water resistant**, so maintenance is very easy.

Water resistant means that splashing water will fall on it, but you **MUST NOT submerge it in water!**

You could only immerse the product in water if it was **waterproof**.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The product is powered by two AAA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator.