

Wireless Remote

 


Change program

Pause / Start



Panty Vibrator

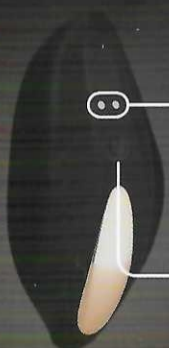

Magnetic charging points

Off / Stand-by

charging time approx. 2h
 run time approx. 1.5h
 max. decibel 50 dB
 materials silicone, ABS
 water resis. splash proof
 remote dist. up to 8m
 storage temp. room temp.
 battery info. Li-ion, 130mAh
 charging info. 3.7V, max. 100mAh



The vibrator is rechargeable and its remote has a battery life of up to 2 years.

Magnetic charging cable

Easy charging at home or on the go.



Welcome to the Panty Rebels

Break the habit of conventional intimacy and give your sexual pleasure a new impulse of suspense and excitement. Embrace your freedom and be a Panty Rebel!

We are the new movement!

Multiple programs

12 vibration modes and 3 speeds.



designed in holland






A brand of ECOM Brands BV
 Phoenixweg 6, 9641 KS Veendam - NL(eu)
 +31 (0)598 - 69 04 53 | info@pantyrebel.com

Pantyrebel

1

Put the vibrator on stand-by

   Place the vibrator in the built-in pocket of the panty.

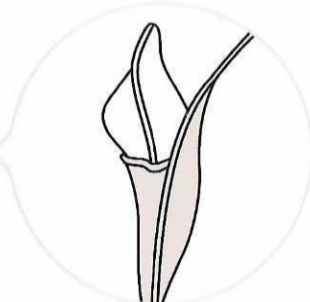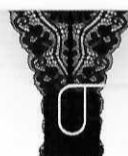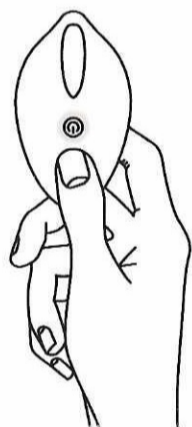

2

Put on the panties

With the vibrator in the pocket.



3

 
Put on your clothes

Make sure the vibrator is well-positioned.



Release your inner rebel.


Use the vibrator wherever you want or, for the ultimate rebel among us, hand over control.

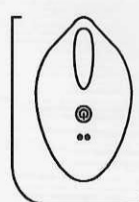

81 x 45mm (LxW)
 3,2" x 1,8" (LxW)



 30mm
 1,2"

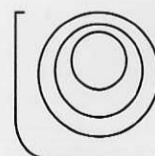

56 x 54mm (LxW)
 2,2" x 2,1" (LxW)



31mm
 1,2"

All available rebel panties

Materials:
 90% polyamide,
 10% elastane

Product number:
 One size fits most



Boysshort Vibrator

PO. Nr. PR001
 S-L



Lace Thong Vibrator

PO. Nr. PR002
 S-L



Panty Vibrator

PO. Nr. PR003
 S-L



Tanga Vibrator

PO. Nr. PR004
 S-L