

PANTIES SWAY VIBES NO. 3 (STIMULATOR)



User manual

CONTROL

- 1) Hold the power button on the stimulator for 3 seconds to turn on. The stimulator will greet you by lighting up the LED. It is now in standby mode.
- 2) Subsequent short presses of the button turn on and change the vibration and pulsation modes.
- 3) To turn it off, long press the power button again for 3 seconds.
- 4) To use the remote control, place the stimulator in standby mode.
- 5) Short press the power button on the remote to start or pause the vibration.
- 6) Change modes by short pressing the top button on the controller with the wave symbol.

MAINTENANCE

After each use, rinse the stimulator with lukewarm water and soapy detergent. You can also use an **erotic cleaner**, which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The stimulator is **waterproof**, so maintenance is very easy. It may get splashed with water, but you can safely immerse it in water and enjoy water play. The remote control is only **water resistant**. The remote control can be splashed with water, but you **MUST NOT immerse it in water!**

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The stimulator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use. Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. The remote control is powered by AAA battery.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find the stimulator, remote control and USB cable for charging.