
## RECHARGING INSTRUCTIONS

- Attach the magnetic USB head to the toy instructed
   (A) below, and plug in to USB power source.
- The light will be constant while the product is charging.
  When fully charged the light will flash (B).
- The tov will complete its charge in around 1 hours.
- For optimal performance fully charge the product before your first use.
- Remove magnetic head from toy and disconnect from USB power source once charging is completed.

## **CHARGING YOUR COCKTAIL**

- (A) Before you first use, please charge the product fully, using the magnetic 'click & charge' USB cable provided. The LED light on the remote control will light up continuously while charging.
- (B) Once charged the LED will flash continuously, the product can now be unplugged and used.

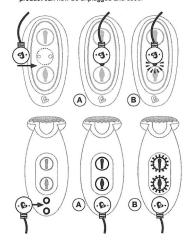

## **VIBRATOR CARE INSTRUCTIONS**

Take care when using the vibrator for the first time, vibration can be intense

- 1. Clean your vibrator after every use.
- Take care when cleaning your vibrator remember it is an electrical item, moisture can damage the product and also react with the batteries.
- Keep your vibrator clean and dry, store in a dry place, moisture can damage batteries and motor.
- Always store your vibrator separately, different materials have different chemical configurations and may react with each other.
- Always allow your vibrator to cool down before storing in a safe place, vibrators are electrical and motors get warm with use.
- Excessive usage of the vibrator will wear out the motor and may cause the motor to over heat. If you feel your vibrator is getting unduly hot, switch off and allow it to cool down, before continuing to use.

# RECHARGEABLE PRODUCTS INSTRUCTIONS ON CHARGING

- The product has a USB lead for charging, you can insert it into a computers USB port.
- The product may be partially charged on purchase but we recommend a full charging cycle before use. Charge the battery for at least 40 minutes before use.
- BE PATIENT Do not switch on or use your vibrator during this first charging session, as this may affect the battery capacity.

 






This is a dual independent motor and remote- control product.
 The motors for the Plug and Shaft can be controlled to provide either single or dual motor stimulation whilst in use.

The product can be operated manually or via the remote control.



• To activate the COCKTAIL and remote press either button (C) or (D) for 3 seconds on both the product and remote.

 


- · When activated the LED light will flash.
- Once activated you can cycle though the 10 settings for each motor by pressing button (C) for the shaft motor, or button (D) for the plug motor.
- You can turn off/on each motor independently by holding down the (C) or (D) button for 3 seconds.





- The LED is on constant for all settings.
- A fast flashing on the LED during use indicates that the battery is low.



## RECHARGEABLE BATTERY INFORMATION

This product contains a Lithium Rechangeable Battery Pack. If battery leakage occurs, stop using immediately and avoid contact with sikn. If skin contact occurs, immediately wash the are thoroughly with warm soapy water. If liquid leakage comes into contact with eyes or body tissue, immediately flush thoroughly with water and see a doctor. Treat this product with care to avoid battery leakage, combustion and explosion. Do not expose the battery pack to excessive physical shock. Do not take apart or attempt to repair the vibrator or battery. Do not touch the terminals of the vibrator with any metal objects.

## WARNING

- To avoid injury or aggravation of pre-existing conditions, this device should not be used on swollen calves or unexplained calf pain.
- If you are unsure or pregnant please consult a doctor before use.
- By following these simple guidelines we are sure your new sex toy will give you great pleasure ...many times
- Please retain all packaging since it contains important information
- · THIS IS NOT A CHILDREN'S TOY ADULT USE ONLY
- Not for use by persons under the age of 18

## WEEE:

This product is classified as Electrical and Electronic Equipment. Should the time come for you to dispose of this product, please ensure that you do so in accordance with the European Waste of Electrical and Electronic Equipment (WEEE) Directive and compliance with local laws relating to this directive.

## IMPORTANT INFORMATION

This product must only be used with the charging device and cable supplied. Do not use the product when it is plugged in for charging. The power supply and bivartor should be regularly examined for damage. In the event of damage, do not use. Only operate when fully charged in accordance with instructions. Always store the adapter or charging unit and any associated cables in a dry place. Always charge this product in a dry place. Always disconnect from the power supply before cleaning this product.